



Fujifilm Finepix S1800 Shutter Button Replacement

Shutter button replacement for the Fujifilm Finepix S1800.

Written By: Ryan Rockford



INTRODUCTION

Is the button to take a photo on your Fujifilm Finepix S1800 jammed or broken? This guide will show you step by step on how to replace the jammed or broken button.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [Fujifilm Finepix S1800 Camera Button](#) (1)

Step 1 — Back Cover Assembly



- Use a J000 screwdriver to unscrew all the four 4mm screws on the left-hand side of the camera.

Step 2





- Use a J000 screwdriver to unscrew the four 4mm screws on the right-hand side of the camera.

Step 3



- Use a J000 screwdriver to unscrew three 4mm screws on the bottom of the camera.


Step 4

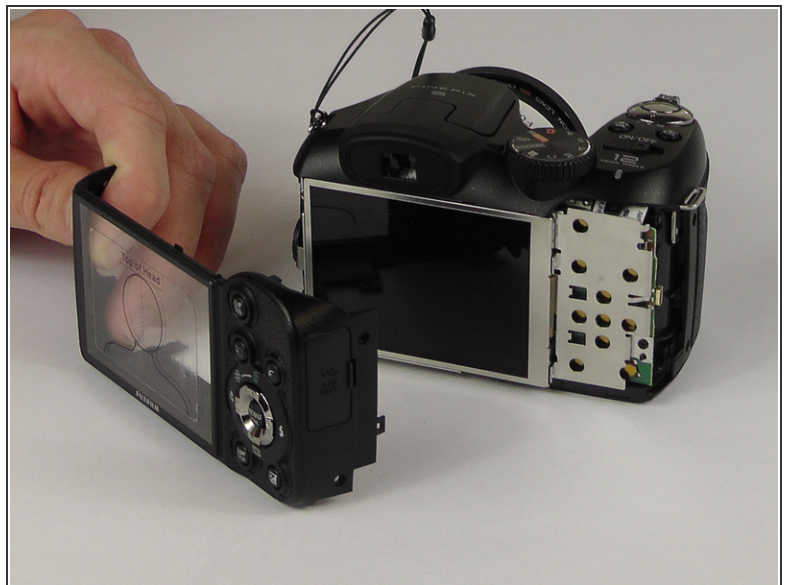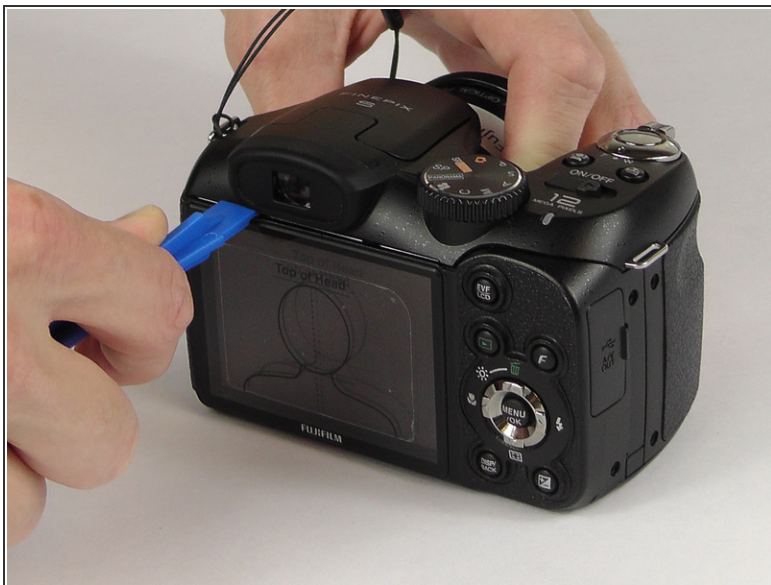

- After all the 4 millimeter screws are taken out, take plastic opening tool and the cover will pop out.


i You may have to work the back cover from different sides to get it to pop off.

Step 5 — LCD Screen

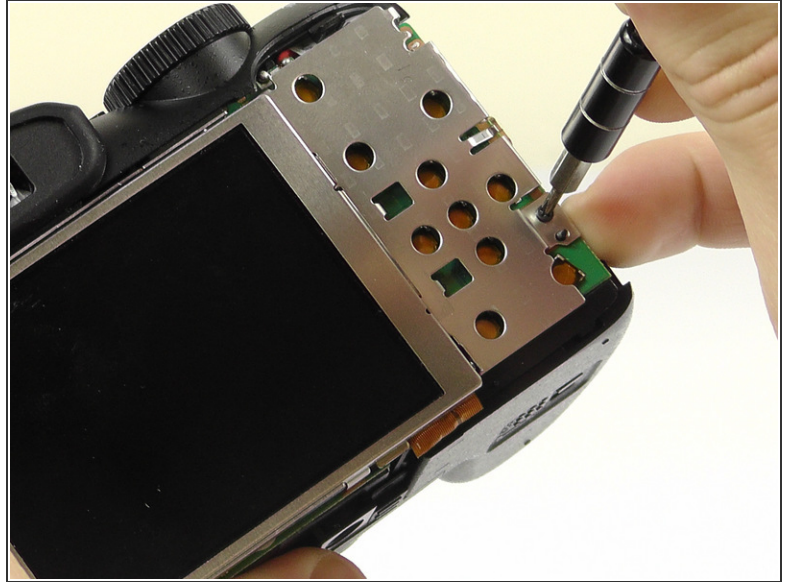


- Use a screwdriver to remove the three 2 mm screws from the back cover plate.
- Separate the back cover from the device.

Step 6

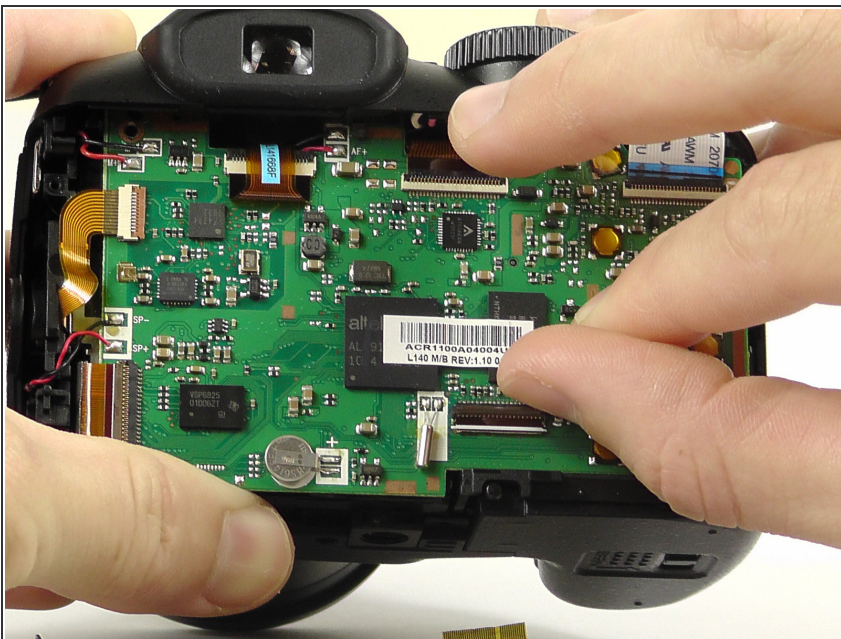

- Lift the LCD screen.
- Move the lever to disconnect the micro strip from the circuit board.
- ⚠ Avoid ripping the fragile micro strip.

Step 7

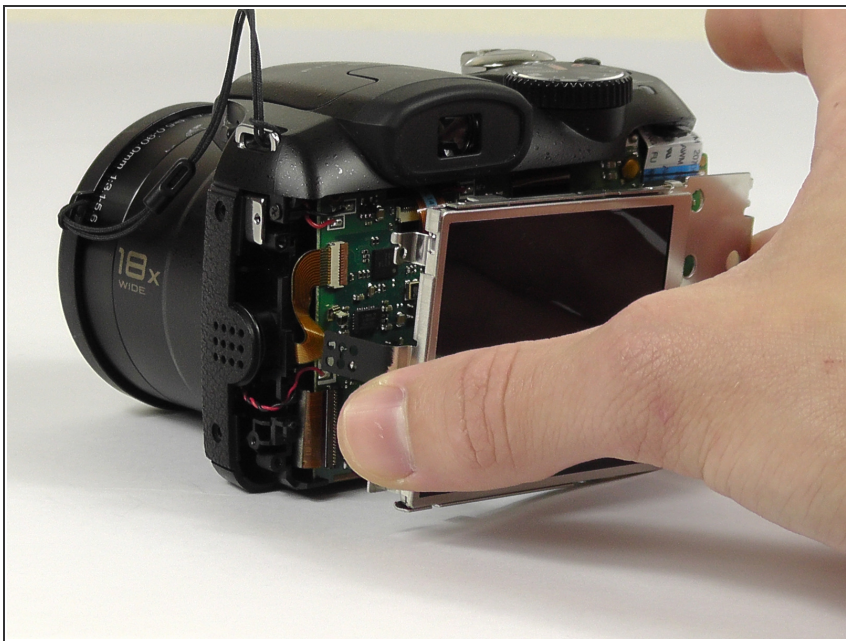

- Gently remove the motherboard. Avoid touching it directly.

Step 8 — Top Cover




- Lift the flash.
- Using a J000 screwdriver, remove the two 4mm screws from the top of the camera.

Step 9



- Remove the 4mm screws from the left and right sides of the camera.


Step 10

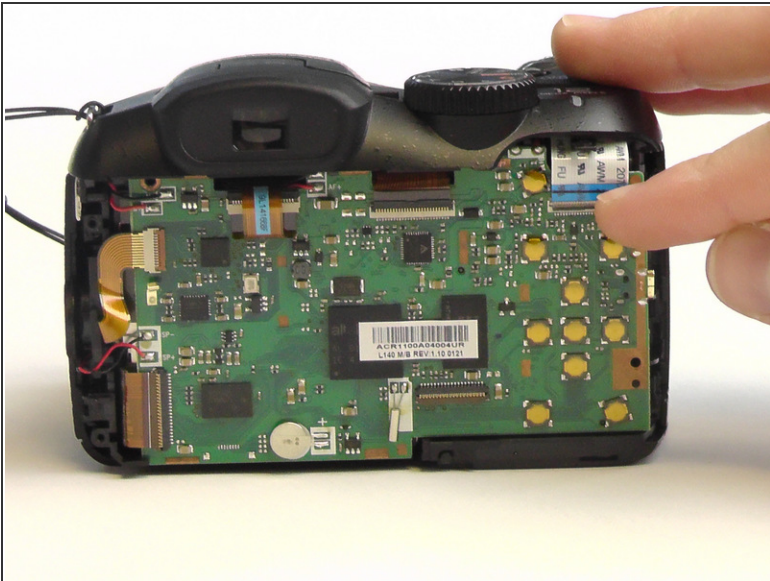

- Switch the lever to disconnect the micro strip that connects the top plate.

⚠ Use caution to avoid ripping the micro strip.

Step 11

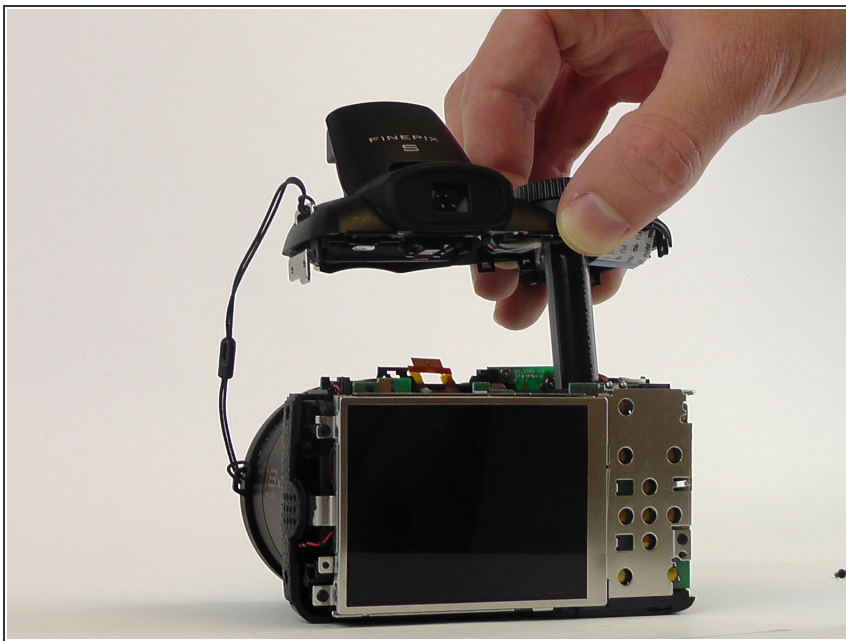

- Remove the top cover.

Step 12 — Shutter Button



- Once the top plate cover is taken off, take the screwdriver and unscrew the two 2 millimeters screws underneath the plate.

Step 13



- Once the two 2 millimeter screws are out the button will fall right out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-08 06:00:00 AM.